

MDT Series Temperature Controller

User Quick Start Manual

○

3. Installation

3.1 Ambient temperature

3.2 Installation site

3.3 Installation method

MDT-01R-R MDT-01T-R


MDT-01R-T MDT-01T-T

MDT-02R-R MDT-02T-R


MDT-02R-T MDT-02T-T

Appearance and Part Name

1.1 Appearance and terminal

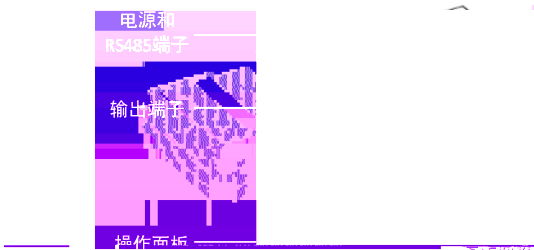


2. Model

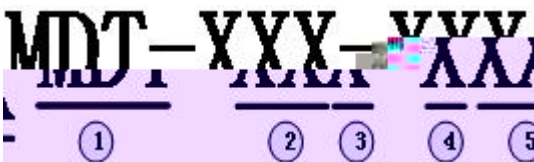

○
○
○


tar

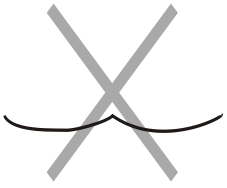


0	0	1	1	2	2	3	3	4	4
5	5	6	6	7	7	8	8	9	9

A	B	b	C	L	d	e	E
F	G	g	H	H	I	j	J
K	L	L	N	n	n	O	O
P	Q	q	R	r	S	S	T
U	V	u	Y	Y	Z	Z	-


MDT-01R-T

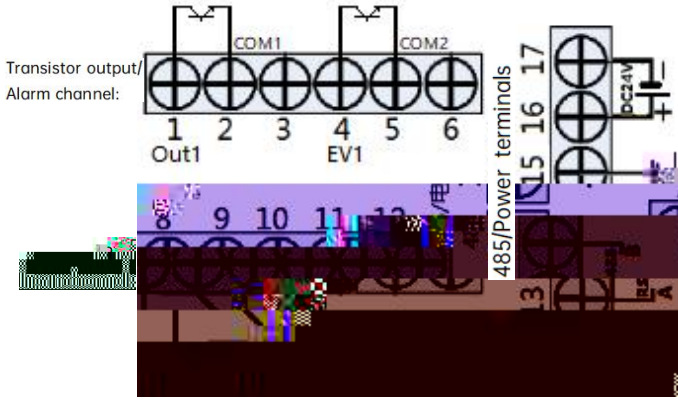


MDT-02R-T:

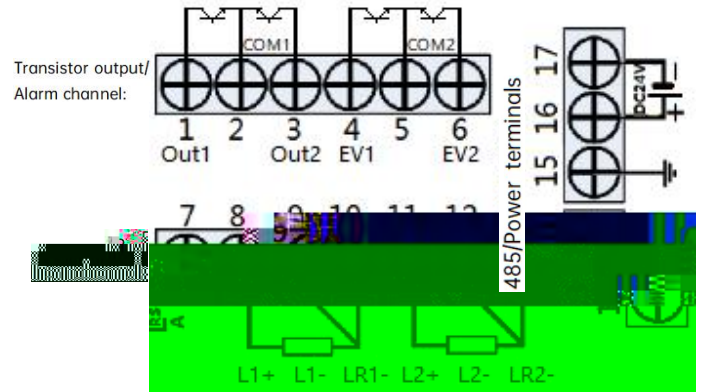


MDT-01T-T

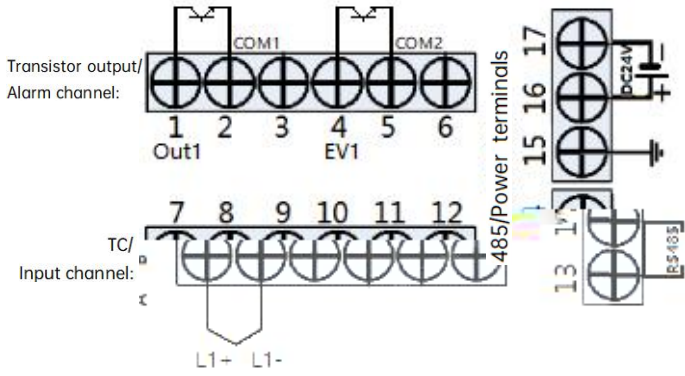

MDT-02T-T:

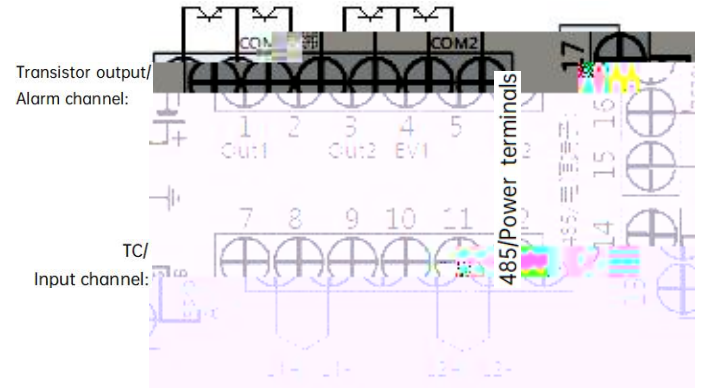

MDT-02R-R:

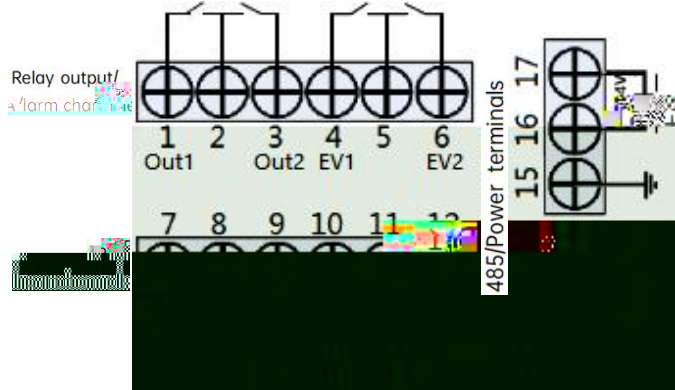

6. Electrical Specification

6.1 Power-supply Specification

6.2 Performance Specification

MDT-02T-R:

